

# Instructions for installation / Float 13,8 kW (2 phase) Pro-B2 control unit + S2-30 power booster

When fixing the sensor to the ceiling:  
distance from heater frame 100–300 mm.

The temperature sensor should be installed no  
less than 1000 mm from an undirected air vent income,  
or less than 500 mm from a directed air vent.

