## Instructions for installation / Float 13,8 kW (2 phase) Wave control unit + S2-30 power booster

A xing the sensor to the ceiling: distance from heater frame 100–300 mm.

The temperature sensor should be installed no less than 1000 mm from an undirected air vent income, or less than 500 mm from a directed air vent.

