

Instructions for installation
Pillar IKI 15 kW
Pro-B2 + power booster

Affixing the sensor to the ceiling:
distance from heater frame 100–300 mm

The temperature sensor should be installed no
less than 1000 mm from an undirected air vent income,
or less than 500 mm from a directed air vent.

