

Instructions for installation
Pillar IKI 7,5 kW, Pillar IKI 9 kW and Pillar IKI 10 kW
Pro-B2 control unit

Affixing the sensor to the ceiling:
distance from heater frame 100–300 mm

The temperature sensor should be installed no less than 1000 mm from an undirected air vent intake, or less than 500 mm from a directed air vent.

