

Physical instructions / Pillar IKI 36 kW 3-way switch connection Pro-B2 control unit + 2 pcs S2-30 additional contactor unit

Affixing the sensor to the ceiling:
distance from heater frame 100–300 mm

The temperature sensor should be installed no less than 1000 mm from an undirected air vent income, or less than 500 mm from a directed air vent.

