Physical installation instructions

Electric heaters 4,5-6,9 kW Finlandia S control unit

The temperature sensor should be installed no less than 1000 mm from an undirected air vent income, or less than 500 mm from a directed air vent.

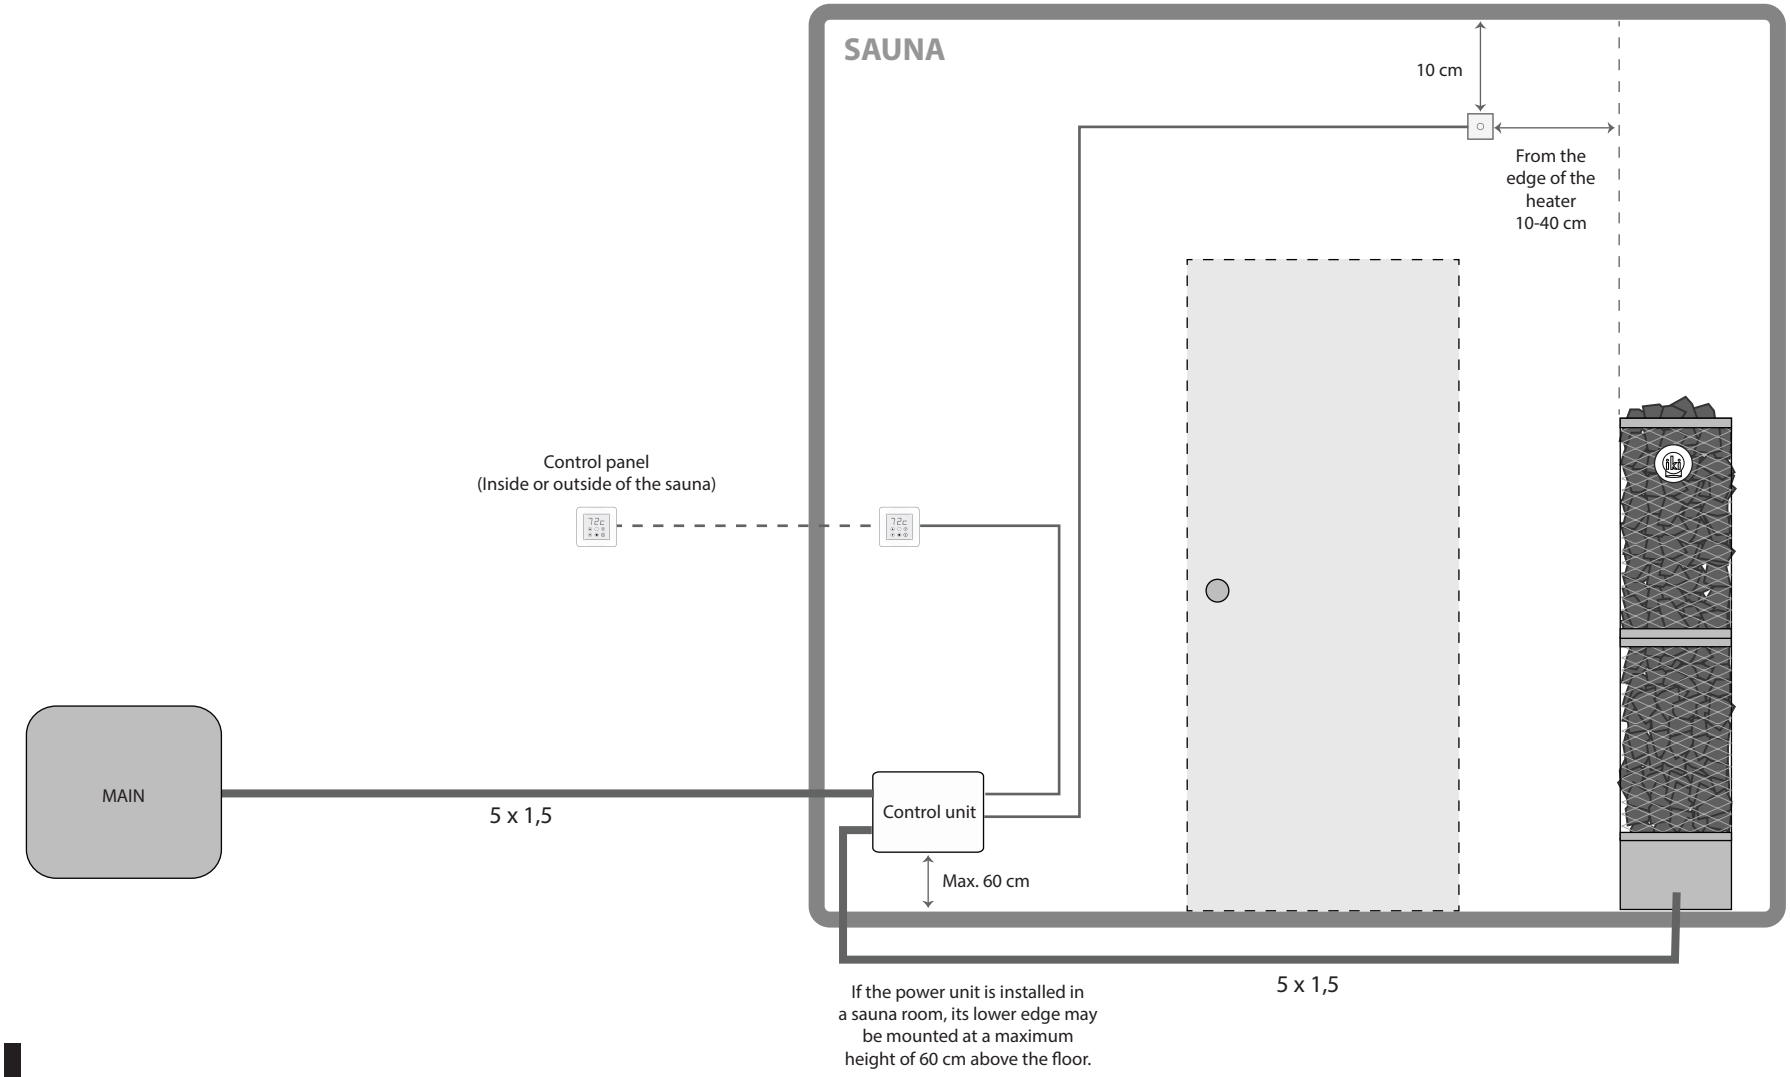

IKI
KIUKAISTA KIUKAIN

© IKI-Kiuas Oy